## Subminiature connectors





Product description Snap-In Female panel mount connector, Contacts: 4, unshielded, THT, IP40, 1/4" 28 UNF, Front mounting

Area Snap-In IP40
Series 719
Part no. 09 9766 20 04

 Illustration Conductor layout Scale drawing





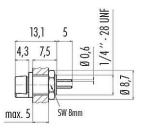

### Contact arrangement (Plug-in side)



You can find the component part drawing and assembly instructions on the next page.

#### **Technical data**

#### General features

Part no.	09 9766 20 04
Connector design	Female panel mount connector
Version	Connector socket straight
Connector locking system	snap-in
Termination	ТНТ
Degree of protection	IP40
Temperature range from/to	-25 °C / 70 °C
Mechanical operation	> 100 Mating cycles
Weight (g)	1.28
Customs tariff number	85369010
Country of Origin	DE

# Subminiature connectors



Product description Snap-In Female panel mount connector, Contacts: 4, unshielded, THT, IP40, 1/4" 28 UNF, Front mounting

Area Snap-In IP40
Series 719
Part no. 09 9766 20 04

#### **Electrical parameters**

Rated voltage	60 V
Rated impulse voltage	800 V
Rated current	3,0 A
Insulation resistance	$\geq 10^{10} \Omega$
Pollution degree	1
Overvoltage category	II
Insulating material group	III
EMC compliance	unshielded

#### Material

Housing material	PA
Contact body material	PA
Contact material	CuSn (bronze)
Contact plating	Au (gold)
REACH SVHC	CAS 7439-92-1 (Lead)
SCIP number	16a4af5e-0b5a-4115-a671-299684da0390

#### Classifications

eCl@ss 11.1	27-44-01-09
ETIM 9.0	EC003569

 
## Subminiature connectors




Product description Snap-In Female panel mount connector, Contacts: 4, unshielded, THT, IP40, 1/4" 28 UNF, Front mounting

Area Snap-In IP40
Series 719
Part no. 09 9766 20 04

### Assembly instructions / Panel cut-out



### **Component part drawing**

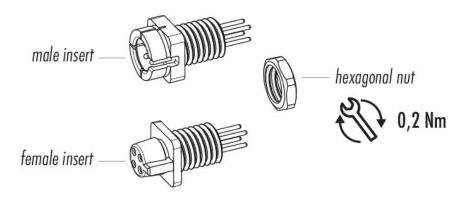

### Subminiature connectors



Product description Snap-In Female panel mount connector, Contacts: 4, unshielded, THT, IP40, 1/4" 28 UNF, Front mounting

Area Snap-In IP40
Series 719
Part no. 09 9766 20 04

#### **Security notices**

The connector must not be plugged or unplugged under load. Non-observance and improper use can result in personal injury.

The connectors have been developed for applications in plant engineering, control and electrical equipment construction. The user is responsible for checking whether the connectors can also be used in other areas of application.

Connectors which are used in circuits with voltages dangerous to the touch may only be installed and used by, or under the supervision of, persons with electrical engineering training, taking into account the applicable regulations and standards.

The user must take suitable safety precautions to ensure that the connector cannot be accidentally disconnected.

Please observe the pollution degree and the overvoltage category. For further information, please refer to the download center "Technical Information".