 


HQ RC UNIVERS34



8 in 1 LCD remote control

MANUAL

all languages



www.hqproducts.com

The **RC UNIVERS34** universal remote controls almost all brands of Televisions (**TV**), DVD-players and DVR-players (**DVD**), DVB receivers and (digital) Satellite receivers and Cable box (**DVB**), Video Recorders (**VCR**), Tuner receivers (**TUNER**), Tape receivers (**TAPE**), CD-players (**CD**), Audio amplifiers and LD-players and other Audio (**AUX**). The **RC UNIVERS34** universal remote control operates all main functions of your selection of devices. It features the largest infrared code library for European market.

This RC provides **Auto Search-, Learn-, Show View-, Macro-, Volume lock-, Device lock- function** and **Low battery indication, permanent back up memory, real time clock** as well.

Please read this user manual carefully before using your new LCD remote control.

For very special functions which are not described in your language please use the English manual.

Device Code Assignment

Bank	for Device	Initial code	Total of codes
TV	TV	048	488
VCR	VCR	075	182
DVB	Satellite,Cable,DVB	075	403
DVD	DVD,DVR	026	190
CD	CD	035	124
TUNER	TUNER	039	114

Realize the Key

SET For you start to set up the remote control or show the status in LCD screen.

LEARN Enter to learning mode.

TV VCR DVB CD DVD TUNER TAPE AUX Let you select the device you want to control.

POWER Turns the device on and off.

0-9 The number keys operate the same as on your original remote control, and maybe also used for entering device codes when set up.

← Works like the enter on your original remote.

AV Works like the TV/Video key on your original TV remote, and TV/SAT key on your original satellite remote A.B in cable and CD modes.

MENU Works like the Menu or OSD (on-screen display) or Memory key on your original remote control.

CH± Works like the Channel Up and Down keys on your original remote control.

VOL± Control the volume like the Volume Up and Down on your original remote control.

⏻ Key to mute the sound

⏮ **REW** (fast reverse)

▶ **PLAY** (operate your DVD, CD etc)

▶▶ **FFWD** (fast forward)

● **REC** (record)

■ **STOP** (terminate your operation)

⏸ **PAUSE**

▲ ▼ ◀ ▶ **OK EXIT** Works like the **UP , DOWN , LEFT , RIGHT , OK , EXIT** Keys on your original remote control for menu function. But during set up mode they are used for cursor, confirm and exit to program your remote control only.

RED YELLOW BLUE GREEN for TV Fast Text.

SHOW VIEW Scans all channels for your program quick view.

ALL OFF Switches off all your devices only with one button.

MACRO Let you make sequent operation for you home theater.


- ☐ Television video
- ☐ TV and text mixed
- ☐ Teletext mode
- ☐ Page hold
- ☐ Displays info on the selected channel

Direct Set Up (by Brand and Code)

1. Turn on the device (e.g. **TV**) you would like to operate. If it is a VCR, please insert a tape.
2. Press and hold the **SET** key on your remote control. Then press (simultaneously) one of


the device keys (e.g. **TV**)

3. Then release them, the brand will be displayed on the screen.
4. You can press the ▲ or ▼ key to select the brand of your device (e.g. your TV brand: **Life**)
5. Check the function of the keys. If none of the keys of your new remote control can work, or most of the keys work improperly, please try another code by the ◀ or ▶ key, until all basic functions operate properly.
6. If you are satisfied with the code, just press the **OK** key to save it. LCD shows **SUCCESS** and then finishes the set up.

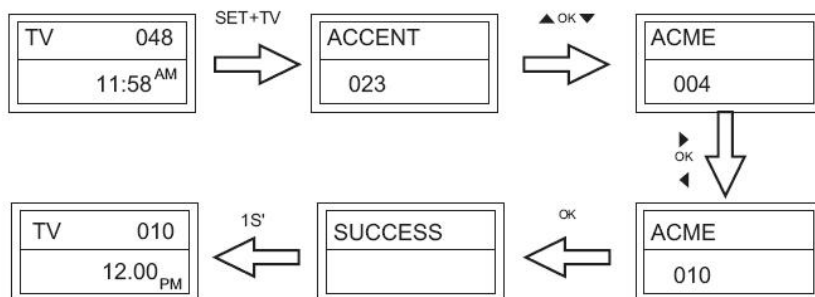


Set-up by Auto Search

1. Turn on the device (e.g. television) you would like to operate. If it is a VCR, please insert a tape.
2. Press the **SET** key on your new remote control for more than 3 seconds, then release it.
3. Press the ▲ or ▼ keys to select to **CODE SETUP** in the LCD menu, and press the **OK** key.
4. The screen shows the **DEV SEARCH** in the LCD menu, and press the **OK** key, then you press **device key** to select your desired operation device(e.g. **DVD**) and then press the **OK** key to start the Auto Search.(you must point your remote control to your device at the moment)
5. See if the device reacts or not, once the device reacts, press any key to stop the search.
6. Test if most of keys work good or not. If most keys work not good enough, please step 4~5.
7. If you find one satisfied code please press the **OK** key to save it and LCD shows **SUCCESS** then show **DEV SEARCH**. You can press device key (e.g. **DVD**) again to finish SET UP or use ▲ or ▼ to select other set up.

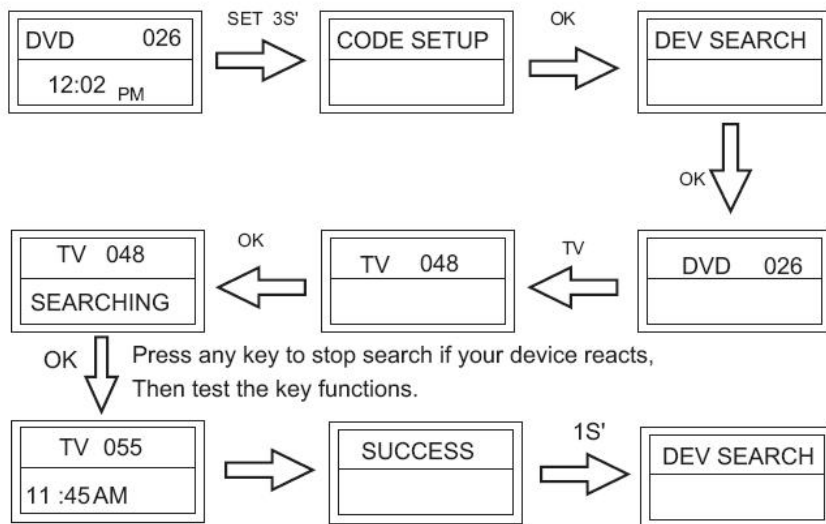

Set-up by Enter Code



1. Switch on the device, which you would like to control (e.g. TV set).
2. In the back section of this manual, find the brand name and code number of your device brand (e.g. **Lifetec 003,010,062**).
3. Press the **SET** key on your new remote control for more than 3 seconds, then release it.
4. Press the **▲** or **▼** keys to select to **CODE SETUP** in the LCD menu, and press the **OK** key.
5. The screen shows the **DEV SEARCH** in the LCD menu, press the **▲** or **▼** keys to select to **CODE SETUP** in the LCD menu, and press the **OK** key.
6. Then you press device key to select your desired operation device(e.g. TV) and then press the **OK** key, you must now enter the **3-digit device code** (e.g. **003** for **Lifetec TV**)
7. Press the **OK** key to save it and LCD shows **SUCCESS**, and press **EXIT** key two times to exit the SETUP mode.
8. You check the function of the keys on the remote control. If most keys on your new remote control do not function correctly, try another 3-digit device code (e.g. **010**...) from the list under the same brand. Repeat steps 3 to 7 until all the basic functions operate correctly.

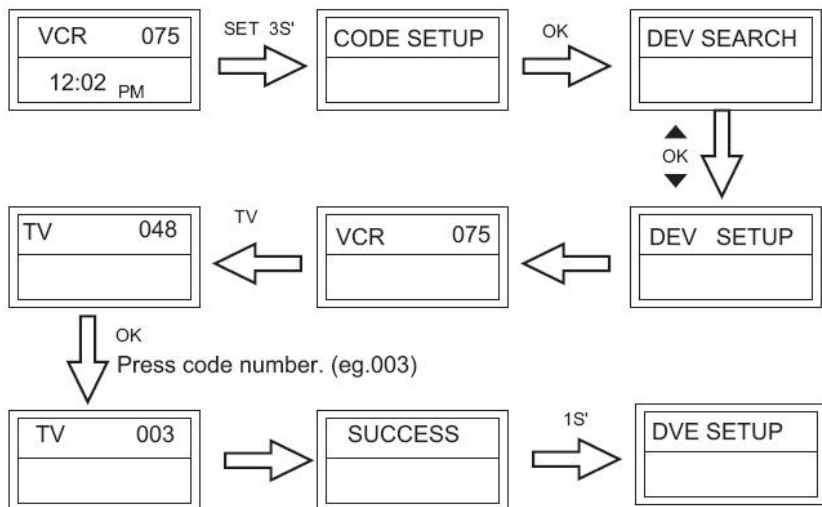

Learning

Learn a Command


1. Press a device key (e.g. **TV**) where you want to learn to.
2. Press and hold the **SET** key for more than 3 seconds, then release it.
3. Scroll $\blacktriangle \propto \blacktriangledown$ key to **LEARNING** in the LCD menu, then press the **OK** key.
4. Scroll $\blacktriangle \propto \blacktriangledown$ key to **LEARN KEY** in the LCD menu and then press the **OK** key.
5. Select the (target) key you want to learn (e.g. **Power**). The LCD display **SELECT KEY**.
6. Point the transmitter of the original remote control remotes face to the receiver window of **RC UNIVERS34** by approximately 30mm apart.
7. Press and hold the original remote key (e.g. **Power**) until the LCD display shows **SUCCESS** for 1 second. If LCD display shows **FAILED**, please repeat steps 4-6.
8. Repeat steps 4-6 to learn more keys.

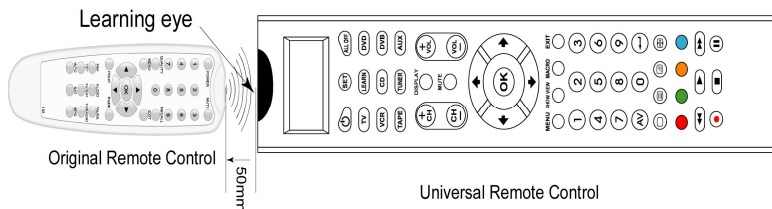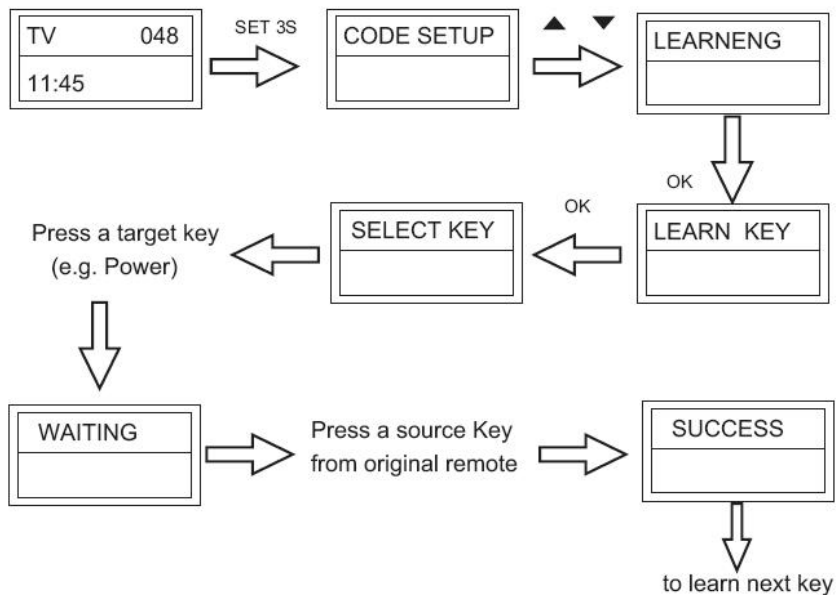

Delete the Learnt Key


If you like to delete a learned command, you can follow the steps as below:


1. Press the device key (e.g. **TV**) where the command you like to delete from.
2. Press and hold the **SET** key for more than 3 seconds, then release it.
3. Scroll **▲** or **▼** key to **LEARNING** in the LCD menu, then press the **OK** key and the LCD display shows **LEARN KEY**.
4. Scroll **▼** or **▲** key to **DELETE KEY** in the LCD menu and then press the **OK** key.
5. Press the key on **RC UNIVERS34** that you want to delete, the LCD shows **SURE DELET** and then press the **OK** key to confirm, the LCD will show **SUCCESS**.
6. Repeat Step 4 to delete next key you w
7. Press a device key (e.g. **TV**) to quit the delete operation when all desired remote commands are deleted.

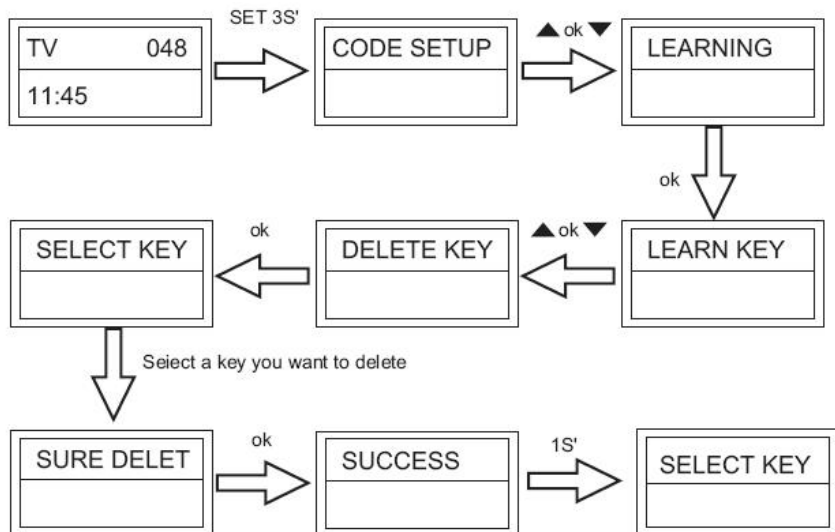

Delete All Learnt Command For a Device

1. Press a device key (e.g. **TV**) where you want to delete commands from.
2. Press and hold the **SET** key for more than 3 seconds, then release it.
3. Scroll ▲ or ▼ key to **LEARNING** in the LCD menu, and then press the **OK** key and the LCD display **LEARN KEY**.
4. Scroll ▲ or ▼ key to **DELETE DEV** in the LCD menu and then press the **OK** key.
5. You select the device want to delete, then press the **OK** key.
6. The LCD shows **SURE DELET** and then press the **OK** key, the LCD shows **SUCCESS**.
7. Repeat step 5 to delete commands in other device key.
8. Press **EXIT** key (e.g. **TV**) to quit deletes operation.

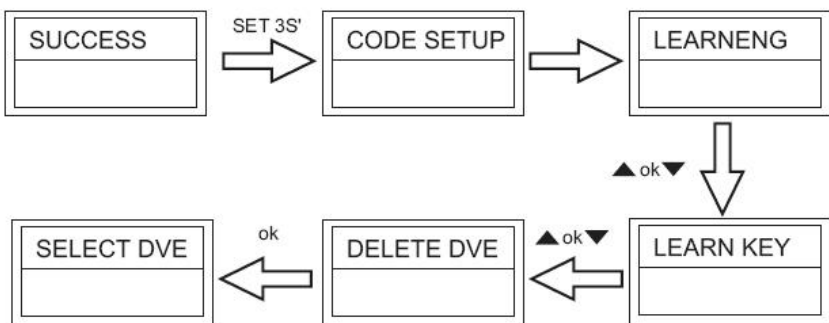

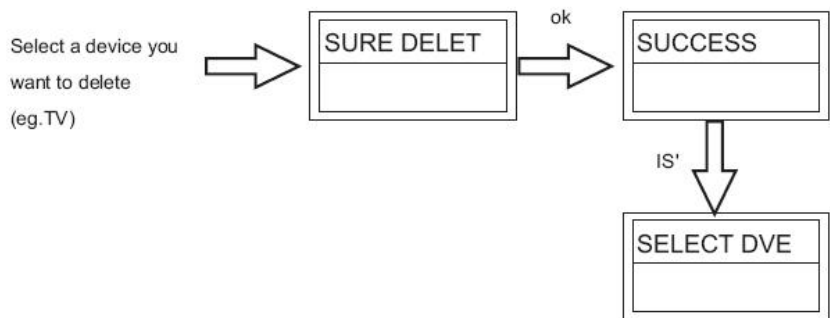


Remark: sometimes it can take about 3 minutes to delete all commands in one device. If there aren't many commands, delete commands one by one.

Other Set Up

A. Set up Clock

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the ▲ or ▼ key to select the **CONFIGURE** in the LCD menu, and then press the **OK** key.
3. Press the ▲ or ▼ key to select the **TIME SETUP** in the LCD menu, and then press the **OK** key.
4. Press the ◀ or ▶ key to move the cursor to select hour or minute or **AM/PM**, then press the number key to set hour and minute, and press the ▲ or ▼ key to select **AM** or **PM**.
5. Press the **OK** key to save the setting and LCD display **SUCCESS** for 1 second then exit to current setup state, if you enter errors the LCD screen shows **ERROR** for 1 second. You can press any **device** key to finish the set up or press **EXIT** key return to the last state.

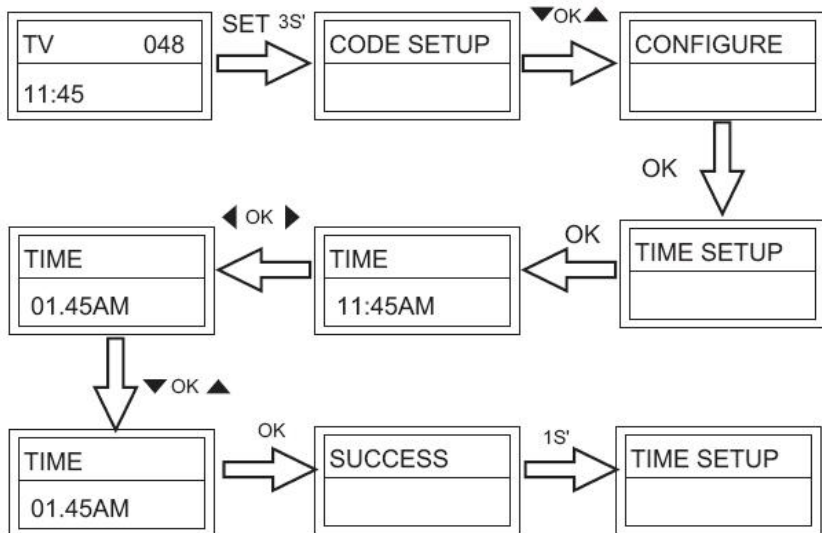

Background Light

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the **▲** or **▼** key to select the **CONFIGURE** in the LCD menu, and then press the **OK** key.
3. Press the **▲** or **▼** key to select the **LIGHT** in the LCD menu, then press the **OK** key.
4. Press the **◀** or **▶** key to change to the **ON** or **OFF** mode.
5. Press the **OK** key to save setting and LCD shows **SUCCESS** then exit to current set up state, you can press any device key to finish set up or press the **EXIT** key to last state, or you can use **▲** or **▼** to select other set up.

Contrast Adjust

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the **▲** or **▼** key to select the **CONFIGURE** in the LCD menu, then press the **OK** key.
3. Press the **▲** or **▼** key to select the **CONTRAST** in the LCD menu, then press the **OK** key.
4. Press the **◀** or **▶** key to adjust contrast level, and then press the **OK** key when you are satisfied.
5. Press the **OK** key to save the setting and the LCD shows **SUCCESS** then exit to current setup state, you can press any device key to finish set up or press the **EXIT** key to last state, or you can use **▲** or **▼** to select another set up.

Show View Function





1. Press the device key to select the device (such as **TV**) that you want to operate.
2. Press and hold the **Show View** key about 1 second. When the device's LED flashes and it goes into Show View mode. The remote control automatically scans all channels for a brief quick view.

Remark: 1. The remote control must be pointed at the device until the Show View mode is finished.

2. If you want to exit the show view mode, please press any key.

Clear All

Erase all the setting up data, and go back to the factory default settings.

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the  or  key to select the **CONFIGURE** in the LCD menu, then press the **OK** key.
3. Press the  or  key to select the **CLEAR ALL** in the LCD menu, then press the **OK** key and LCD shows **SURE CLEAR**.
4. Then press the **OK** key to clear all settings and go back to original default settings.