



**RC UNIVERS41**

- Works for the most popular brands
- Preprogrammed for easy set up
- Quick search function
- Automatic search function
- Setup by direct- or search mode
- The remote control can be used for following devices and functions:  
TV/CTV/VCR/DBS/SAT/CBL /HiFi/CD/LD/VCD/DVD
- Test mode
- Code read out

How to install the batteries.  
Open the battery compartment by dismantling the battery lid and insert two batteries type AAA. Don't mix old and new batteries. Close the compartment with battery lid.

**Set up**

**Direct code mode:**

Power on the device by hand. Select the device, brand and code number on the attached code list. For example TV/TXT brand ACE, code 713. Press "SET"- and then the device button for example "TV1", the LED will light up constant. Type in the selected code number "713" after the last digit the LED will stop. Check if all buttons work properly. If not choose another code. If there is no other code use the quick search mode. This operation is valid for all device buttons.

To stop the setup mode press the device button again or wait for 10 seconds then it will stop automatically. Notice: By pressing buttons without function the LED will not light up.

If the direct mode wasn't successful use the quick search mode.

**Quick search mode:**

Power on the device by hand. Press the "SET" button continuously and then the device button you want to set. Release both buttons, the LED is on. Press the "SET" button again, the LED will flash. Press the "POWER" button step by step until the device reacts (Power off) then press the "SET" button and after that the device button. Check if all buttons work properly. If not start the procedure again. The code search will start with next code after the selected not again by zero. Notice: The search direction can be changed by pressing the "SET" button once for backward and again for forward. The start configuration is always forward.

**Automatic search mode:**

Switch on the device TV, VCR SAT etc... by hand direct. Press the device key you want to setup then press the "SET- (green) + POWER-(red)" buttons together until the LED will flash. Aim the remote control to the device you want to control when the device react press the "POWER" button. Check if all buttons work properly. If not start the procedure, but before read out the code (see below).

**Read out:**

To read out the 3 digit code press and hold the "SET"- button then press the button "1" for the first digit release the "SET"- button. Start again to press the "SET"- button then press the button "2" to read out the second digit. Start it once more, press the "SET"- button then press the button "3" to read out the third digit.

LED indication:

- 0 = no light
- 1 = flashing once
- 3 = flashing twice

And so on...

Note the code for the next time you to setup the remote control.


## RC UNIVERS41

- Works for the most popular brands
- Preprogrammed for easy set up
- Quick search function
- Automatic search function
- Setup by direct- or search mode
- The remote control can be used for following devices and functions:  
TV/CTV/VCR/DBS/SAT/CBL/HiFi/CD/LD/VCD/DVD
- Test mode
- Code read out

### How to install the batteries.

Open the battery compartment by dismounting the battery lid and insert two batteries type AAA. Don't mix old and new batteries. Close the compartment with battery lid.

### Set up

#### Direct code mode:

Power on the device by hand. Select the device, brand and code number on the attached code list. For example TV/TEXT brand ACE, code 713. Press "SET"- and then the device button for example "TV1", the LED will light up constant. Type in the selected code number "713" after the last digit the LED will stop. Check if all buttons work properly. If not choose another code. If there is no other code use the quick search mode. This operation is valid for all device buttons.

To stop the setup mode press the device button again or wait for 10 seconds then it will stop automatically. Notice: By pressing buttons without function the LED will not light up.

If the direct mode wasn't successful use the quick search mode.

#### Quick search mode:

Power on the device by hand. Press the "SET" button continuously and then the device button you want to set. Release both buttons, the LED is on. Press the "SET" button again, the LED will flash. Press the "POWER" button step by step until the device reacts (Power off) then press the "SET" button and after that the device button. Check if all buttons work properly. If not start the procedure again. The code search will start with next code after the selected not again by zero.

Notice: The search direction can be changed by pressing the "SET" button once for backward and again for forward. The start configuration is always forward.

#### Automatic search mode:

Switch on the device TV, VCR SAT etc... by hand direct. Press the device key you want to setup then press the "SET-(green) + POWER-(red)" buttons together until the LED will flash. Aim the remote control to the device you want to control when the device react press the "POWER" button. Check if all buttons work properly. If not start the procedure, but before read out the code (see below).

#### Read out:

To read out the 3 digit code press and hold the "SET"- button then press the button "1" for the first digit release the "SET"- button. Start again to press the "SET"- button then press the button "2" to read out the second digit. Start it once more, press the "SET"- button then press the button "3" to read out the third digit.

LED indication:

0 = no light

1 = flashing once

3 = flashing twice

And so on...

Note the code for the next time you to setup the remote control.

